


Quick Start Guide

cinemizer

looking for adventure



cinemizer: Overview

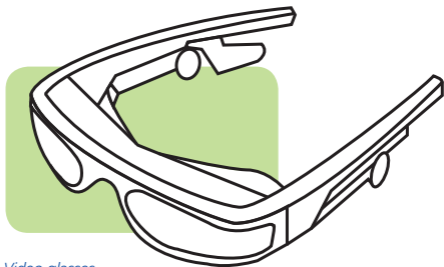

Video glasses

For detailed information please refer to the cinemizer user manual at www.zeiss.com/cinemizer



Remote control

Press Play/Pause button to start/stop video.


Press Rewind or Fast forward button to rewind/
fast forward.

Adjust volume using audio controls on the
right side.

Adjust brightness/contrast using video mode
button.

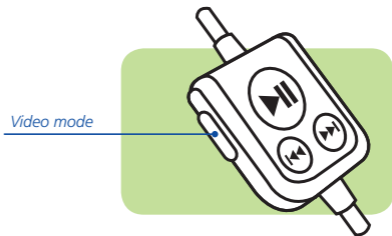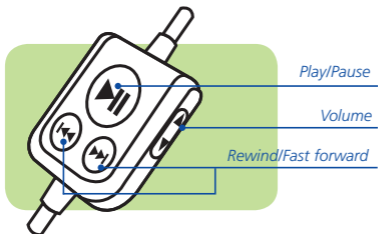

Battery Box

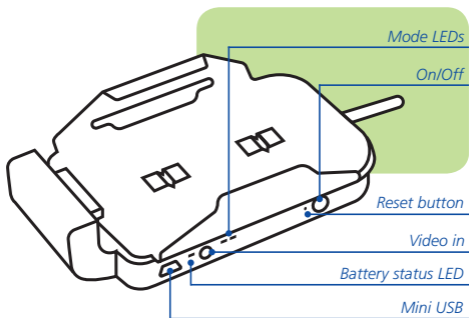

*Battery box with iPod clip
and iPod connector*

Power button for video glasses.

Reset button to reset video glasses.

Mode LEDs for 2D/3D-Mode.

Video in for other devices other than iPod.

Battery status LED and mini USB port for
charging video glasses and iPod.

Battery life when full charged: at least
4 hours.

Charging time: minimum 2.5 hours.

iPod Clips and iPod Connector



Fit the appropriate clip for your iPod onto the Battery box.




Latch your iPod to the connector on the battery box.

You can connect other playback devices via the Video in port using a separate cable (not included). This will only work if an iPod is not connected.


Using cinemizer

Press the power button on the battery box to turn on the video glasses.

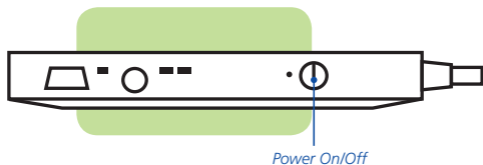

Turn on your iPod and wait until TV out is automatically configured on your iPod.

Put on your video glasses.

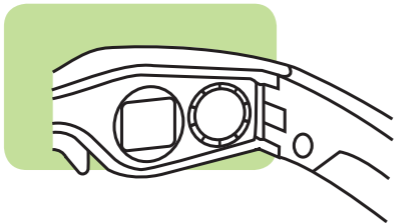



Adjust diopter settings (+/-3.5 dpt). Press Play/Pause button for five seconds until the test picture appears. (This function is only available if no iPod is connected.) Turn the small wheel until the picture is sharply focused. While adjusting the settings for one eye, keep the other eye closed.


Select the appropriate nose pad. The top and bottom edge of the picture should be entirely visible.



Adjust the inclination and length of each earphone to fit each ear.

Slide the earpieces to the desired position.

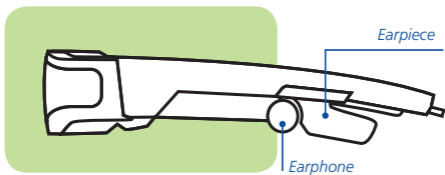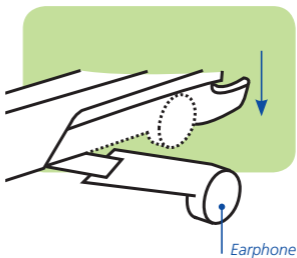

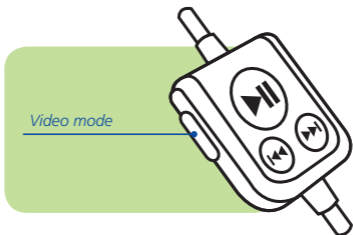

Video mode

Adjust brightness/contrast via the Video mode button (three presets available).

Choose 2D or 3D by pressing and holding the Video mode button for a few seconds (3D mode not available for 2D content).

Adjust volume using audio controls on the right side.

Select and start a video on your iPod. You can control a running video via the remote control.

Listen to and watch your videos responsibly.

iPod is not included.

Compatible with iPod touch, iPod classic, iPod with Video and iPod nano (3rd Generation). Multimedia players, DVD players and game consoles are also supported.

www.zeiss.com/cinemizer

cinemizer™



“Made for iPod” logo means that an electronic accessory has been designed to connect to an iPod and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

Carl Zeiss AG

Carl-Zeiss-Strasse 22
73447 Oberkochen
Germany
www.zeiss.com/cinemizer

