

Carat Advantage® Blocking and Edging Instruction




Important: Read this prior to edging Carat Advantage lenses

The enclosed lenses feature **Carat Advantage** coating. Due to the excellent hydrophobic properties, the surface of the lenses is extremely smooth. It is necessary to use the enclosed adhesive film with your regular blocking material and follow these instructions to ensure precise and secure edging.


1. **Clean the lenses with Acetone or Alcohol.**
2. **Measure the lenses** in the usual way with the focimeter.
3. **Mark the lenses** – in the case of progressive lenses, you may need to identify the engravings with a permanent marker (e.g. Staedtler Lumocolor Permanent Special Marker).
4. Before blocking, pull the **enclosed adhesive film** off the foil.



5. Attach the film to the front surface of the lens (in the blocking area).

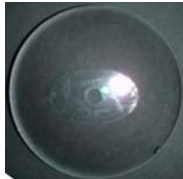

6. **Block the lenses** with a leap pad or wax block in the usual way on top of the adhesive film.
7. **Edge the lenses** in the usual way.
8. After edging, **remove the film** from the front surface. Please do not use any sharp objects to remove the film, as the surface may otherwise be damaged.

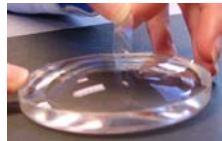

Please note: Good edging results with Carat Advantage can only be achieved if these instructions are followed and the enclosed film is used.

Carat Advantage® Blocking and Edging Instruction



Important: Read this prior to edging Carat Advantage lenses

The enclosed lenses feature **Carat Advantage** coating. Due to the excellent hydrophobic properties, the surface of the lenses is extremely smooth. It is necessary to use the enclosed adhesive film with your regular blocking material and follow these instructions to ensure precise and secure edging.


1. **Clean the lenses with Acetone or Alcohol.**
2. **Measure the lenses** in the usual way with the focimeter.
3. **Mark the lenses** – in the case of progressive lenses, you may need to identify the engravings with a permanent marker (e.g. Staedtler Lumocolor Permanent Special Marker).
4. Before blocking, pull the **enclosed adhesive film** off the foil.



5. Attach the film to the front surface of the lens (in the blocking area).



6. **Block the lenses** with a leap pad or wax block in the usual way on top of the adhesive film.
7. **Edge the lenses** in the usual way.
8. After edging, **remove the film** from the front surface. Please do not use any sharp objects to remove the film, as the surface may otherwise be damaged.

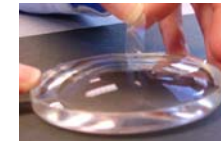

Please note: Good edging results with Carat Advantage can only be achieved if these instructions are followed and the enclosed film is used.