


Cinemizer Stereoscopic 3D format


side-by-side horizontally squeezed

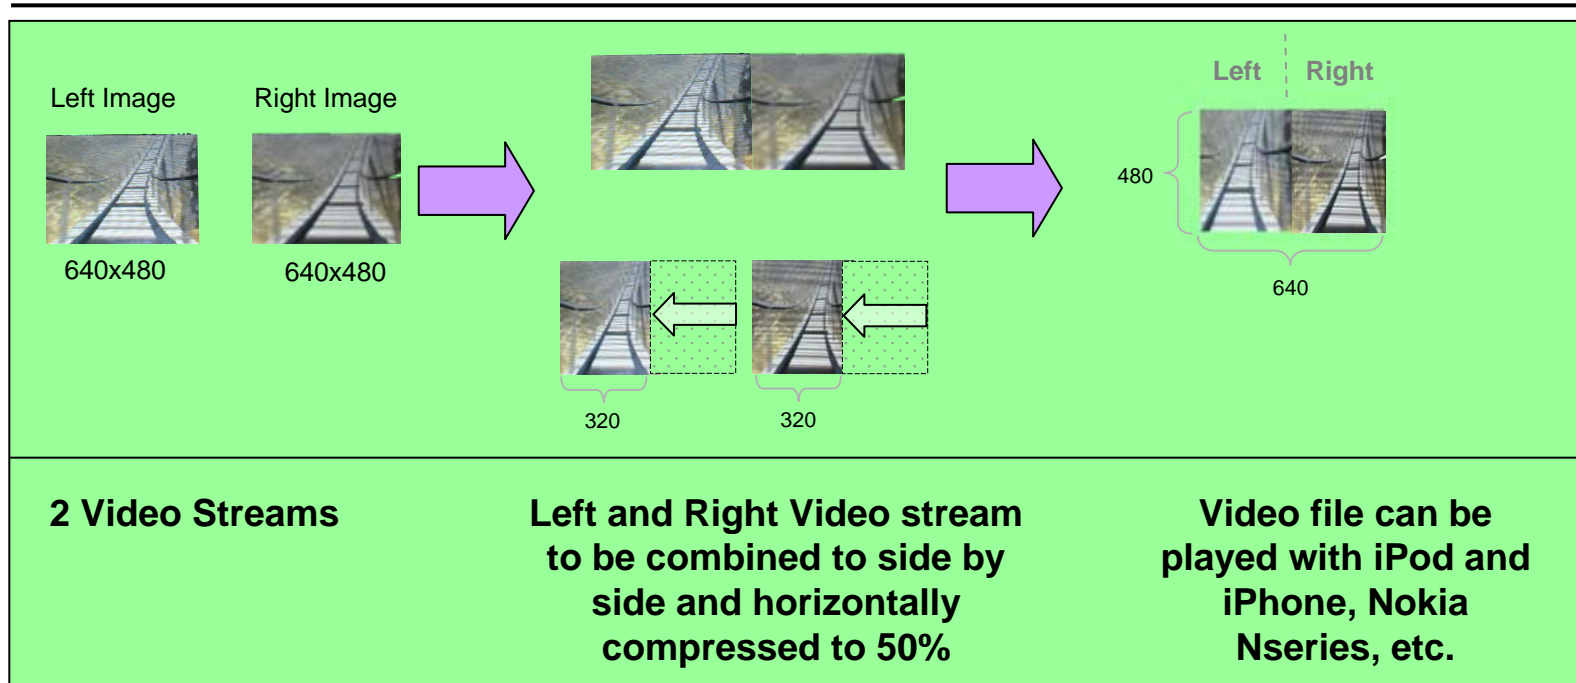

3D-Format:

- Side-by-Side, left image on the left side, right image on the right side
- Compressed horizontally by a factor of two to fit into a standard 2D-Frame (640x480)
- Output file can be played with video player on iPod, iPhone and Nokia Nseries phones

How does 3D work with cinemizer?

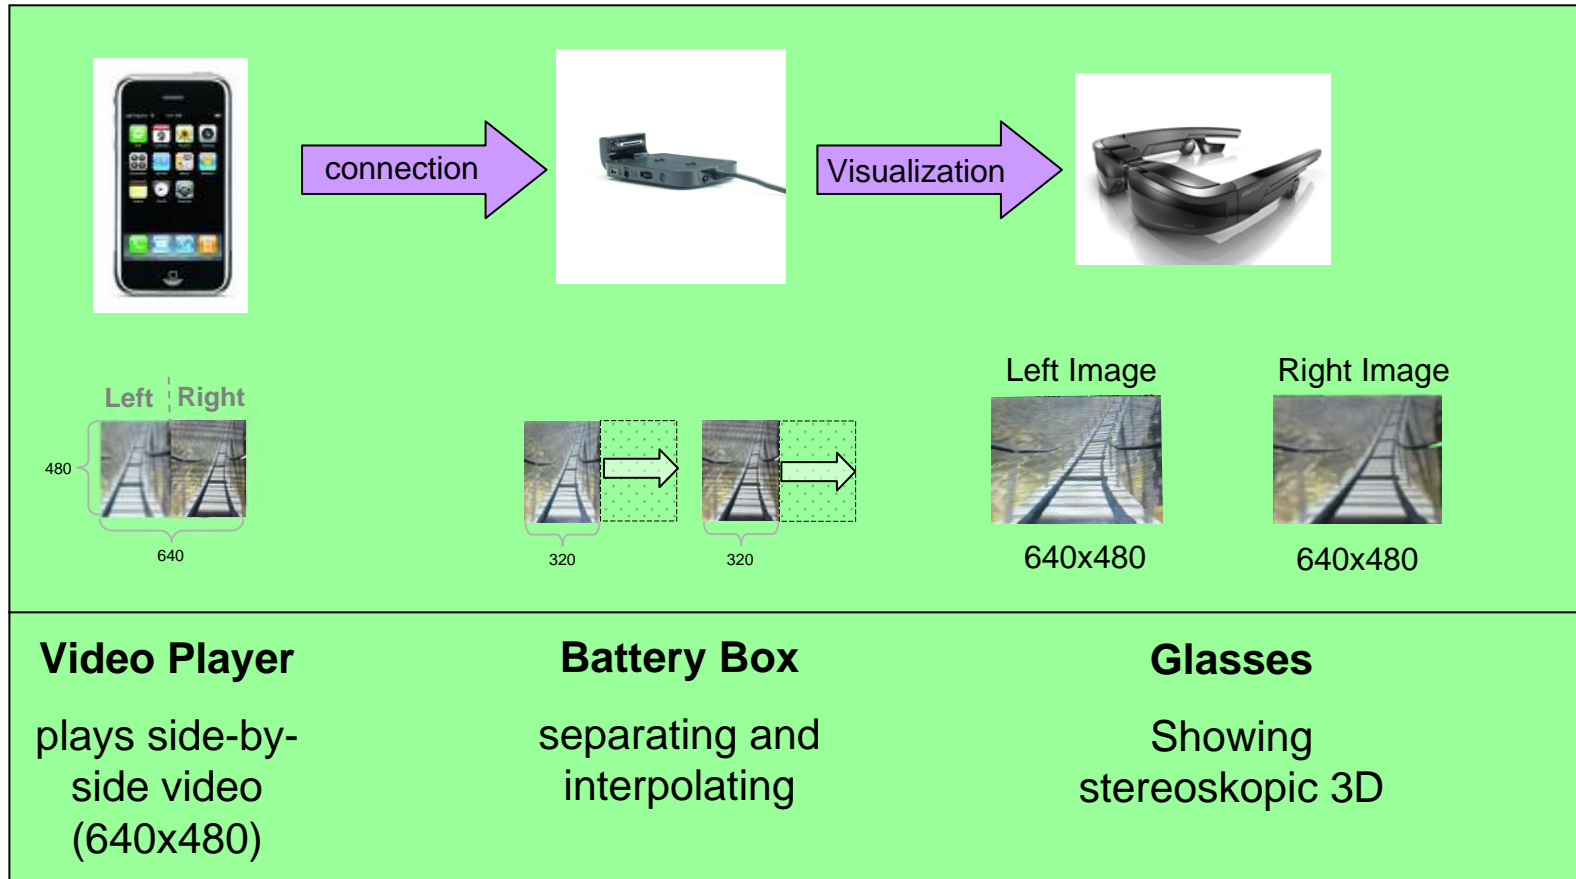

iPod supported encoding formats



-
1. H.264 video, up to 1.5 Mbps, 640 by 480 pixels, 30 frames per second, Low-Complexity version of the H.264 Baseline Profile with AAC-LC audio up to 160 Kbps, 48kHz, stereo audio in .m4v, .mp4, and .mov file formats
 2. H.264 video, up to 2.5 Mbps, 640 by 480 pixels, 30 frames per second, Baseline Profile up to Level 3.0 with AAC-LC audio up to 160 Kbps, 48kHz, stereo audio in .m4v, .mp4, and .mov file formats
 3. MPEG-4 video, up to 2.5 Mbps, 640 by 480 pixels, 30 frames per second, Simple Profile with AAC-LC audio up to 160 Kbps, 48kHz, stereo audio in .m4v, .mp4, and .mov file formats

preferred