



## **ZEISS Victory SF & ZEISS SFL**



[www.zeiss.com/consumer-products/us/hunting.html](http://www.zeiss.com/consumer-products/us/hunting.html)

Seeing beyond



**READY FOR INTENSE  
HUNTING EXPERIENCES.  
THANKS TO THE  
SMARTFOCUS CONCEPT.  
VICTORY SF AND SFL.**

The Victory SF and SFL models feature outstanding optics, an impressive field of view and, of course, the SmartFocus Concept. The high-performance Victory SF and SFL binoculars are extremely versatile and stand out for their comfortable handling and excellent ergonomics that will allow you to endure long days in the field without fatigue.

In the new SFL binoculars, ZEISS has succeeded in packing these high-performance elements into an even lighter and more compact form. Combined with the new UHD concept for natural colors and unique ergonomics, the SFL delivers outstanding visual quality and an immersive viewing experience in a lightweight and durable binocular.

# VICTORY SF AND SFL.

## DISCOVER **MORE** AND EXPERIENCE **LONGER**.

### Superior field of view

Extremely wide field of view compared to many competitors for an even better overview in the field.




Increases the observable range by up to 20% compared to other binoculars



### ErgoBalance Concept


Ideally balanced for long, steady viewing with less strain on the upper and lower arm muscles.

- light
- heavy

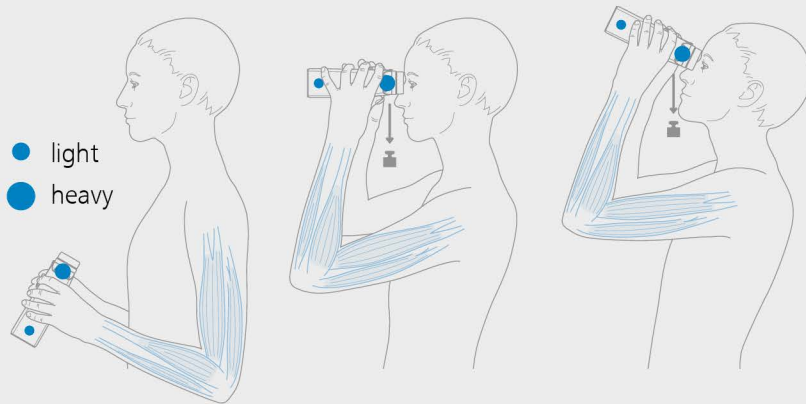

### ZEISS FieldFlattener Technology

Extreme edge sharpness, even at wide fields of view.

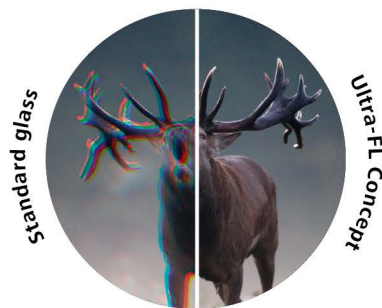

### Ultra-FL Concept

Multiple SCHOTT fluoride lenses for exceptionally vivid details and a true-to-life appearance.




Standard glass

**SCHOTT**  
**HT GLASS**

### HT Concept

High-transmission SCHOTT glass for optimal visibility in low light.

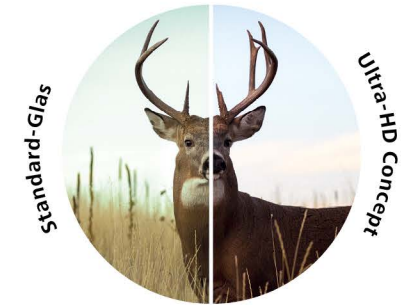

### Ultra-HD Concept

Maximum detail visibility and color fidelity thanks to optimizations in coating and optical design.



### LotuTec®

Dirt-repellent and extremely easy-to-clean lenses.




### T\* Multi-layer coating


Multi-layer coating for sharp and high-contrast viewing.



**ZEISS Victory SF**



**ZEISS SFL**






# SMART FOCUS WITH SUPERIOR FIELD OF VIEW. VICTORY SF

**Victory SF binoculars from ZEISS allow you to experience the most exciting hunting moments.**

ZEISS Victory SF binoculars are the most versatile premium binoculars in the 175-year history of ZEISS. Their optical perfection, impressive field of view, revolutionary ergonomics, and lightweight design make Victory SF binoculars extremely versatile for use in any conditions. In other words, they are an expression of everything that ZEISS stands for: unparalleled leading-edge optics.

## SmartFocus Concept

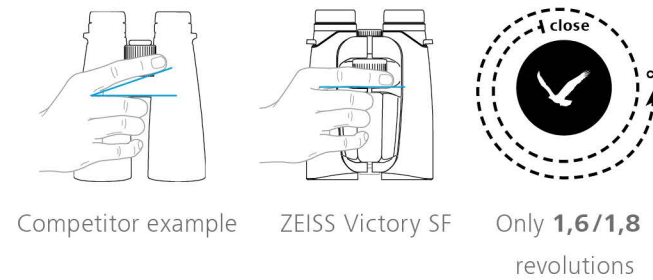

The SmartFocus Concept ensures that the focusing wheel is perfectly positioned. This ensures that you can focus quickly and precisely, even when observing for hours on end.

# VICTORY SF



## Extremely wide field of view

The impressively wide fields of view of both SF models give you a good overview in unclear terrain and help you find exactly the target you are looking for.

## SmartFocus Concept

SmartFocus Concept for intuitive, precise, rapid focusing thanks to an ergonomic finger position.



## Balanced ergonomics

The SF models' center of gravity has been shifted closer to the eyepiece thanks to the ErgoBalance Concept, allowing for long and fatigue-free observation.

## True-to-Life image quality

The Ultra-FL Concept combines multiple SCHOTT fluoride lenses into a system that delivers extremely natural color rendering and vivid details.

# HUNTING OBSERVATION VICTORY SF 32.



90%  
Light transmission

UFL HT FF T<sub>3</sub> ☔

## See more than others.

- An extremely wide field of view enlarges the observable area by up to 20% and thus up to 465 feet at 1,000 yards.
- 90 % light transmission.
- Vibrant and natural color rendering thanks to the UFL Concept.
- Compact design and ErgoBalance Concept for long hours of comfortable wildlife observation.
- Weighing just 21.2 ounces, much lighter than other binoculars.



### SF 8/10×32

The SF 32 models feature vibrant, true-to-life image quality, an extended field of view, and an ergonomic design for longer, fatigue-free viewing.

UFL HT FF T<sub>3</sub> ☔

# IDEAL VISIBILITY INTO THE TWILIGHT HOURS. VICTORY SF 42.



92%  
Light transmission

UFL HT FF T<sub>3</sub> ☔



### SF 8/10×42

In addition to outstanding optical performance, the SF 42 model offers perfect ergonomics – the focusing wheel, which is perfectly positioned thanks to the SmartFocus Concept, enables fast and precise focusing.

UFL HT FF T<sub>3</sub> ☔

## The best for every situation.

- 92 % light transmission.
- Breathtaking viewing experience thanks to UFL Concept.
- Exceptionally wide field of view of up to 444 feet at 1,000 yards.
- ZEISS FieldFlattener technology: extreme edge sharpness, even at wide fields of view.
- Perfect ergonomics and ruggedness thanks to TripleLink bridge and lightweight design with state-of-the-art magnesium materials.
- Close focusing distance of 4.9 feet to explore the smallest details



# SMART FOCUSING AND LIGHTWEIGHT. ZEISS SFL

The new ZEISS SFL binoculars make it possible to experience exciting hunting moments with a new level of ease. Optimized for a light weight and compact size and available in two models, they are the perfect complement to the SF family.

The new UHD Concept for natural colors, the unique ergonomics, and the SmartFocus Concept ensure the binoculars deliver outstanding visual quality and an immersive viewing experience. The lightweight magnesium housing ensures that the binoculars are durable and long-lasting – for generations to come.

**NEW** Extremely lightweight



The reduced lens diameter and more compact arrangement of even thinner lens elements make the SFL models **up to 30% lighter** than comparable binoculars.

## VICTORY SFL

### Ultra lightweight, compact design

The lightweight magnesium body and reduced lens diameter combined with the closer spacing make the SFL 19% lighter and 17% shorter than the Victory SF 42.

### SmartFocus Concept

The perfectly positioned focusing wheel allows you to focus quickly and precisely – without having to spread your fingers apart.



### Perfect ergonomics

The large exit pupil allows users to quickly and easily position their eye for a comfortable and immersive viewing experience. Improved eyecups for an even better ergonomic feel.

### Superior optical performance

The new UHD Concept delivers maximum detail visibility and color fidelity thanks to optimized coating and optical design.



# HAPPY BUCK HUNTING. VICTORY SF AND SFL THE BEST FOR EVERY SITUATION.

In addition to hunting skills and good preparation, choosing the right equipment plays an essential role in successful hunting. The size and weight of the equipment play a critical role in your ability to successfully stalk game. Compact binoculars like the Victory SF and SFL models offer a clear advantage in this regard, because thanks to their perfect ergonomics, you can focus entirely on the hunt – and not on your equipment.

PRODUCT PROFILE

## HUNTING ZEISS SFL 40.



### SFL 8/10x40

The perfect ergonomics of the SFL 40 models, the Ultra lightweight design, the UHD Concept, and the SmartFocus Concept make handling easy and precise while still providing the highest level of detail recognition, even when observing for hours on end.



### Carefree observation.

- A viewing experience rich in detail with natural colors thanks to the UHD Concept.
- 90 % light transmission.
- The large exit pupil allows users to quickly and easily position their eye for a comfortable and immersive viewing experience.
- Ultralight, compact design featuring the SmartFocus Concept.
- A clear view at all times thanks to our LotuTec® coating.

# COMPARISON OF VICTORY SF AND SFL.

	Main use			
	Outdoor/ recreation	Hunting	Birding / nature observation	Tree stand / blind
<p><b>Light transmission</b></p> <p><b>Optical quality</b></p> <p><b>ZEISS Victory SF</b></p> <p>92% (SF 42) 90% (SF 32)</p> <p>UFL, HT, FF, T</p> <p>SF 8×42, SF 10×42, SF 8×32, SF 10×32</p>				
<p><b>ZEISS SFL</b></p> <p>90%</p> <p>UHD, FF, T</p> <p>SFL 8×40, SFL 10×40</p>				
<p><b>ZEISS Victory HT</b></p> <p>95%</p> <p>HT, FL, T</p> <p>HT 8×54, HT 10×54</p>				
<p><b>ZEISS Victory Pocket</b></p> <p>91%</p> <p>FL, T</p> <p>Pocket 8×25, Pocket 10×25</p>				
<p><b>ZEISS Conquest HD</b></p> <p>90%</p> <p>HD, T</p> <p>HD 8×42, HD 10×42, HD 8×32, HD 10×32, HD 8×56, HD 10×56, HD 15×56</p>				
<p><b>ZEISS Terra ED / Pocket</b></p> <p>88%</p> <p>ED, T*</p> <p>ED 8×42, ED 10×42, ED 8×32, ED 10×32, Pocket 8×25, Pocket 10×25</p>				

\*Hydrophobic and antireflective coating.

# TECHNICAL DATA.

Victory binoculars Model	SF		SFL		SFL	
	8×32	10×32	8×42	10×42	8×40	10×40
Magnification	8	10	8	10	8	10
Effective lens diameter	32 mm		42 mm		40 mm	
Exit pupil diameter	4 mm	3.2 mm	5.3 mm	4.2 mm	5 mm	4 mm
Twilight factor	16	17.9	18.3	20.5	17.9	20
Field of view (ft/1,000yds)	155	130	148	120	420	345
Subjective viewing angle	67°	69°	64°		60°	
Close focusing distance	6.4 ft		4.9 ft		4.9 ft	
Diopter adjustment range	+-4 dpt					
Exit pupil distance	19 mm		18 mm		18 mm	
Interpupillary distance (IPD)	54-76 mm		55-76 mm		52-74 mm	
Prism system	Schmidt-Pechan		Schmidt-Pechan		Schmidt-Pechan	
Coating	LotuTec®				T*	
Nitrogen filling	Yes				Yes	
Water resistance	400 mbar				400 mbar	
Operating temperature	-22/+145 °F				-4/+131 °F	
Length	5.9 in		6.8 in		5.7 in	
Width at an interpupillary distance of 65 mm	4.4 in		4.9 in		4.5 in	
Weight	21.2 oz	20.8 oz	27.8 oz		22.6 oz	

Subject to changes in design and scope of delivery as a result of ongoing technical development.

## ACCESSORIES



### Air Cell Comfort Straps

The carrying strap makes carrying binoculars with a lens diameter of 30 mm or more much more comfortable. The enclosed air cushions increase carrying comfort. Quick-release fasteners allow you to quickly attach and detach the carrying strap. The length of the strap is fully adjustable.



### Comfort Cross Straps

The cross straps made of high-quality materials reduce neck strain and distribute the weight of the binoculars across the upper body. The binoculars remain steady and do not swing in different directions when you are moving. The binoculars can be easily locked in place and are very comfortable to carry at the same time.



# ZEISS Transferable Limited Lifetime Warranty and Transferable Five-Year No-Fault Policy

At ZEISS North America we back your Sports Optics purchase with a limited lifetime warranty as well as a 5-year no-fault policy – both fully transferable.

The warranty protects against defects in workmanship and materials in the Optical System for the life of the product, and in electronic components for five years from the date of purchase. Components (such as turrets) and accessories (such as lens caps) are warranted for one year from the date of purchase. If a ZEISS product has a defect covered by this warranty, we will either repair it, or replace it, with a new or reconditioned ZEISS product of comparable specifications. **Please note** that certain specialty products (such as stabilized binoculars and DTI thermal scopes) have shorter warranty periods.

ZEISS understands that accidents happen, so in addition to the limited lifetime warranty, we offer the added protection of our transferable Five-Year No-Fault Policy on **select Victory and Conquest products**. If you accidentally damage your product during normal and intended use within the first five years of the life of the product, we will either repair it, or replace it, at no cost to you.

To view the complete details of the Transferable ZEISS Limited Lifetime Warranty and Transferable Five-Year No-Fault Policy, please visit: [zeiss.com/consumer-products/us/service.html](https://zeiss.com/consumer-products/us/service.html)

## ZEISS DTI Thermal Imaging Cameras Warranty

ZEISS grants a minimum warranty period of two years from the date of purchase for the ZEISS DTI 3/25 and 3/35 Thermal Imaging Camera. The DTI 3/25 and 3/35 are also eligible to have the warranty extended by one year, for a total of three years, if the buyer registers the product via ZEISS Online Registration within four weeks of the purchase date. Register online at [zeiss.com/consumer-products/us/service/product-registration.html](https://zeiss.com/consumer-products/us/service/product-registration.html)

## Become a Part of the ZEISS Hunting Community

Follow us online:

 [facebook.com/ZEISSHuntingUS](https://facebook.com/ZEISSHuntingUS)

 [zeiss.com/hunting/blog](https://zeiss.com/hunting/blog)

 [youtube.com/user/zeissportsoptics](https://youtube.com/user/zeissportsoptics)

 [zeissshunting](https://zeissshunting)

### Customer Service

1-800-441-3005

[info.sportsoptics.us@zeiss.com](mailto:info.sportsoptics.us@zeiss.com)

Carl Zeiss SBE, LLC

Consumer Products

[zeiss.com/consumer-products/us/hunting.html](https://zeiss.com/consumer-products/us/hunting.html)



## OVERVIEW OF BENEFITS

- HT** **HT Concept**  
High-transmission SCHOTT glass for optimal visibility in low light.
- ED** **Extra Low-Dispersion Glass**  
For enhanced color fidelity.
- UFL** **Ultra-FL Concept**  
Multiple SCHOTT fluoride lenses for exceptionally vivid details and a true-to-life appearance.
- FF** **ZEISS FieldFlattener Technology**  
Extreme edge sharpness, even at wide fields of view.
- FL** **Fluoride Glass**  
A natural appearance thanks to fluoride glass from SCHOTT.
- LotuTec®**  
Dirt-repellent and extremely easy-to-clean lenses.
- UHD** **Ultra-HD Concept**  
Maximum detail visibility and color fidelity thanks to optimizations in coating and optical design.
- T\***  
Multi-layer coating for sharp and high-contrast viewing.
- HD** **High-Definition Lenses**  
For outstanding resolution and fine sharpness.

