


Exceptionally Accurate. Extremely Precise.



Seeing beyond

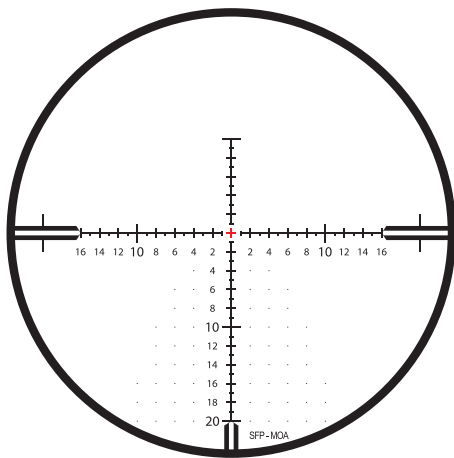



ZMOAi-20 Reticle for ZEISS Conquest V4 Riflescopes

New!

Highly intuitive reticles, the Ballistic Stop™, and the all-new External Locking Windage Turret, combined with legendary ZEISS optics, create a superior system that ensures first shot impact on long-range targets – exactly where you want it.

ZMOAi-20

ZEISS Minute of Angle Illuminated Reticle

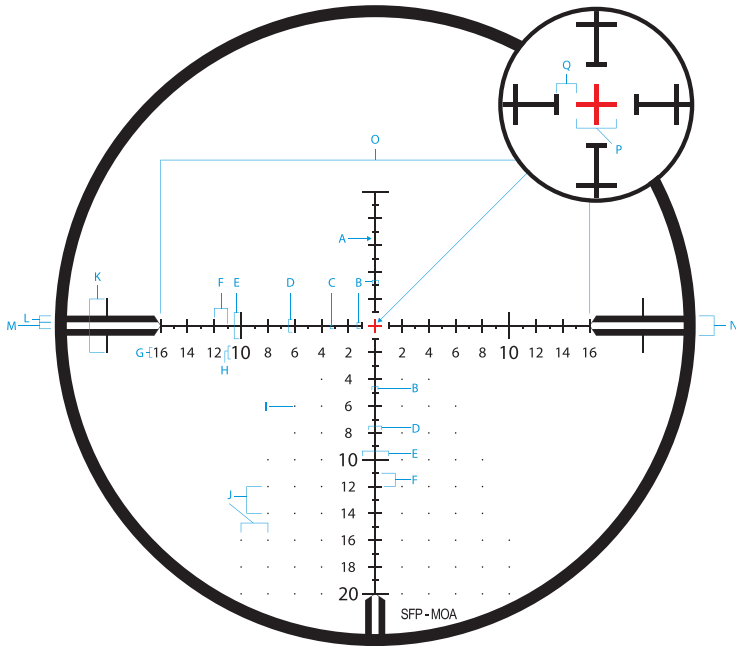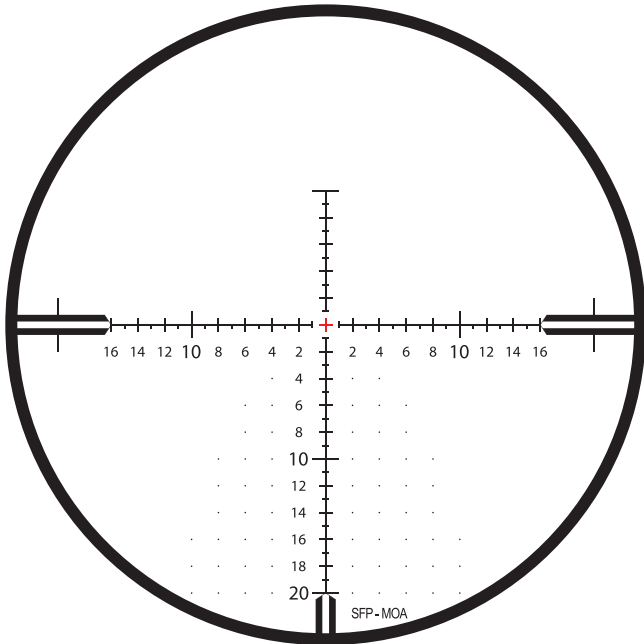

The **ZMOAi-20** reticle shares the same architecture as the ZMOAi-T20 reticle, albeit with a thicker line subtension. The thicker reticle is helpful for those that hunt frequently against darker backgrounds and tree canopies, as well as where the user has visual difficulties distinguishing thinner reticles.

Each hash mark represents one MOA spacing, and MOA references are easily identified with even MOA numbers illustrated adjacent to the main horizontal and vertical lines of the reticle. The floating center point of aim allows for ultra-precise shot placement, and can be illuminated. The floating dots located left and right of the main vertical centerline allow the shooter to validate windage calls and bullet impact.

RETICLE TYPE	RETICLE #
ZMOAi-20	89
ILLUMINATED Second Focal Plane Reticle	
RIFLESCOPE	Conquest V4 6-24x50
Magnification	@ 24x
UNIT OF MEASURE	MOA
Line Thickness A	0.12
Distance B	0.5
Distance C	0.25
Distance D	1.0
Distance E	2.0
Distance F	1.0
Distance G	4.0
Standard Number Height H	0.75
10, 20 Number Height I	1.0
Dot Size J	0.12
Dot Spacing K	2.0
Distance L	1.5
Distance M	0.5
Distance N	0.5
Distance O	32
Distance P	1.0
Spacing around center cross Q	0.5

AVAILABLE IN ZEISS CONQUEST V4 6-24X50



ZEISS Conquest V4 Rifle Scope


PART NUMBER	RETICLE: ZMOAi-20	RETAIL
522955 9989 090		\$1,249.99
6-24x50 - Ext. Elevation - Ballistic Stop - Ext. Locking Windage		

- 30 mm Main Tube ■ Matte Black ■ Side Parallax Adjustment
- Second Focal Plane ■ .25 MOA Adjustments
- T* Six Layer Transmission Coating ■ LotuTec® Hydrophobic Coating

Exceptionally Accurate. Extremely Precise.



Seeing beyond

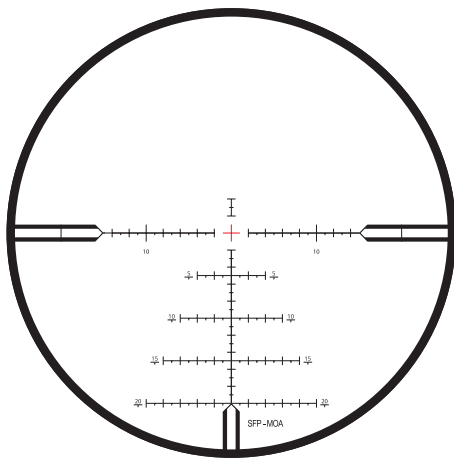

ZBi Reticle for ZEISS Conquest V4 Riflescopes



Highly intuitive reticles, the Ballistic Stop™, and the all-new External Locking Windage Turret, combined with legendary ZEISS optics, create a superior system that ensures first shot impact on long-range targets – exactly where you want it.

ZBi

ZEISS Ballistic Illuminated Reticle


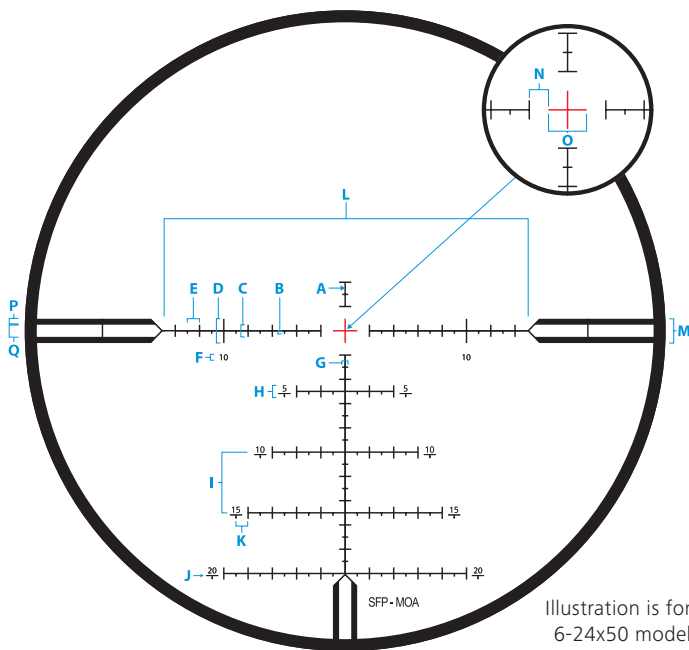


Illustration is for 6-24x50 model

AVAILABLE IN THESE ZEISS CONQUEST V4 MODELS

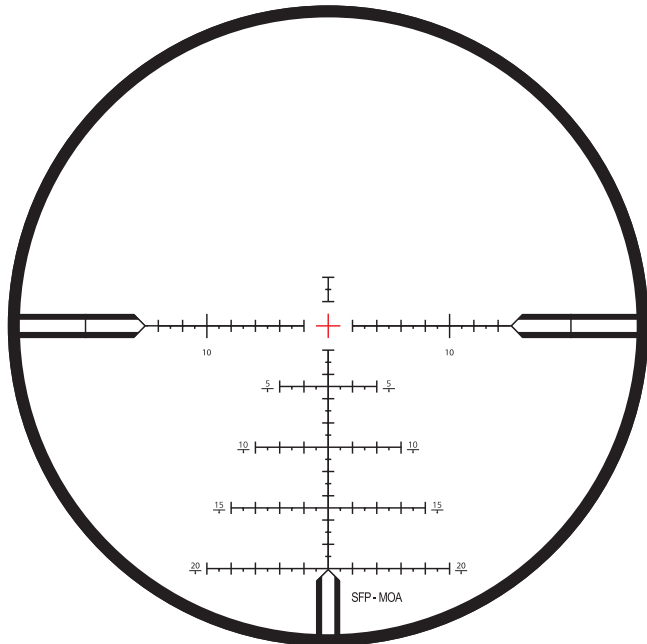

The all-new ZBi reticle was designed to offer a more appropriate reticle to support long-range hunting and shooting where users demanded an easy-to-see, easy-to-understand, clean, and highly useful reticle for long-range hunting and shooting. Visually, it is fast to pick up and easy to get on target. The highly useful design supports quick, accurate and intuitive hold-offs for windage corrections. This is the ideal reticle for those that want a clutter-free reticle with useful design for taking the tougher shots.

RETICLE TYPE	RETICLE #	
ZBi	68	
ILLUMINATED Second Focal Plane Reticle		
RIFLESCOPES	Conquest V4 4-16x44/50	Conquest V4 6-24x50
Magnification	@ 16x	@ 24x
UNIT OF MEASURE	MOA	MOA
Line Thickness A	0.12	0.12
Distance B	0.25	0.25
Distance C	1.0	1.0
Distance D	2.0	2.0
Distance E	1.0	1.0
Number Height F	0.5	0.5
Distance G	0.5	0.5
Drop Indicator Height H	1.0	1.0
Line Spacing I	5.0	5.0
Drop Indicator Line Thickness J	0.06	0.06
Distance to Center of Number K	1.0	1.0
Distance L	30	30
Distance M	2.0	2.0
Spacing Around Center Cross N	1.0	1.0
Distance O	2.0	2.0
Distance P	0.5	0.5
Distance Q	1.0	1.0

ZEISS Conquest V4 Riflescopes

PART NUMBER	RETICLE: ZBi	RETAIL
522935 9968 000		\$1,049.99
4-16x44 - Capped Elevation - Capped Windage		
522935 9968 080		\$1,099.99
4-16x44 - Ext. Elevation - Ballistic Stop - Capped Windage		
522935 9968 090		\$1,149.99
4-16x44 - Ext. Elevation - Ballistic Stop - Ext. Locking Windage		
522945 9968 080		\$1,099.99
4-16x50 - Ext. Elevation - Ballistic Stop - Capped Windage		
522955 9968 090		\$1,249.99
6-24x50 - Ext. Elevation - Ballistic Stop - Ext. Locking Windage		