

Exceptionally Accurate. Extremely Precise.



Seeing beyond



New ZEISS Conquest V4 Riflescopes for 2020


Highly intuitive reticles, the Ballistic Stop™, and the all-new External Locking Windage Turret, combined with legendary ZEISS optics, create a superior system that ensures first shot impact on long-range targets – exactly where you want it.

PRODUCT HIGHLIGHT


ZEISS Conquest® V4

FOR THE DEMANDS OF HUNTING AND SHOOTING


ILLUMINATED RETICLE OPTIONS:

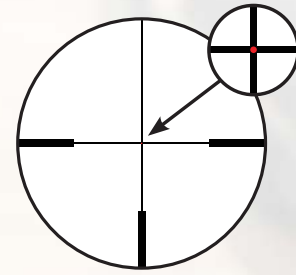


PLEX #60

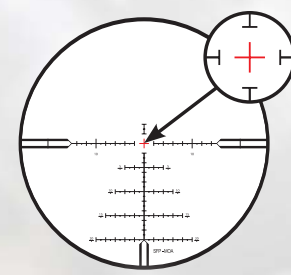


ZBi

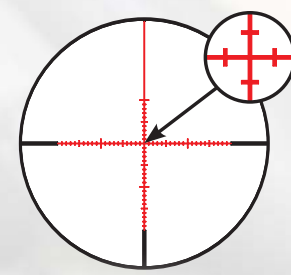


ZMOAi-1

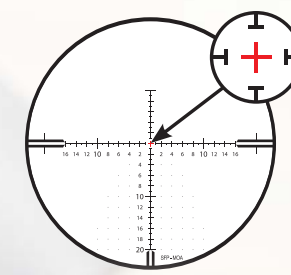

ZMOAi-20

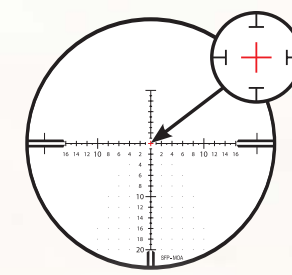

ZMOAi-T20

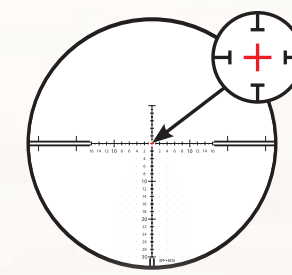

ZMOAi-T30

Designed and Engineered in Germany

Absolute reliability: the mechanical systems stand the test of harsh recoil, extreme temperatures and abusive field conditions.

Proven 4x Zoom

Relevant magnification ranges, with a 4x zoom ratio, provide a high level of versatility across a wide array of applications.

Side Parallax Adjustment and Reticle Illumination Control

10 yards to infinity on applicable models to ensure absolute best images and most accurate shooting solutions. 10-position rheostat-controlled illumination adjustment.

Second Focal Plane Reticle Options

Available with the traditional plex-style #60 illuminated reticle and Z-Plex #20. Other reticles include the ZEISS MOA-based smart reticles: ZB and ZMOA series. ZEISS has also introduced the newer ZMOAi-20 and ZBi reticles. These reticles feature fine line subtensions to ensure minimum target coverage and maximum target visibility.



Generous Eyebow

The friendly and forgiving eyebow, coupled with abundant eye relief and the wide field of view, affords the shooter fast and full target acquisition, which helps to enable swift and accurate shot placement.

All-New External Locking Windage Turret

The optional External Locking Windage Turret (ELWT), with windage limiter, supports the user to make easy, super-fast, repeatable, and secure windage adjustments while in the field. Pull out to make an adjustment. Push in to lock the setting. The windage limiter allows for a half rotation left or right of zero. The ELWT changes the rules of the game for long-range.

External Elevation Turret

Easy to manipulate, positive, tactile and highly repeatable turret, with Ballistic Stop and large range of adjustment, provides the shooter with maximum flexibility needed for challenging targets, no matter how far down range.

Optical Performance

Higher definition glass, enhanced with T* light transmission coatings and LotuTec protective lens coating, produces 90% to-the-eye light transmission, great low-light performance and excellent target resolution across the entire magnification range. When combined, these features and benefits create a best-in-class experience.

OPTICS:

T* T* Six-Layer Lens Multi-Coating

LotuTec®

90% Light Transmission

TURRETS:

Capped Turret

External Turret

External Locking Windage Turret

Ballistic Stop

Multi-Turn Turret

1/4 MOA

FEATURES:

2nd Focal Plane

4x Zoom

Nitrogen Purged

Illuminated

30 mm Maintube

Waterproof up to 400 mbar

Lightweight



ZEISS Limited Lifetime Transferable Warranty and Five-Year No-Fault Policy

The **Conquest® V4** riflescopes were designed as a lightweight, high-performance product line for various demanding hunting and shooting applications. They are by any standard best-in-class and are backed by the **ZEISS Limited Lifetime Transferable Warranty and Five-Year No-Fault Policy**.

Part Number	30mm Main Tube - Matte Black - Second Focal Plane - Capped Windage Turret - T* Six Layer Transmission Coating - LotuTec Hydrophobic Coating	Retail
522961 9920 000	3-12x44 Z-Plex Reticle (#20) - Capped Elev Turret - .25 MOA - Fixed Parallax	\$699.99
522921 9920 000	3-12x56 Z-Plex Reticle (#20) - Capped Elev Turret - .25 MOA - Fixed Parallax	\$899.99
522925 9960 000	3-12x56 Plex Illum. Reticle (#60) - Capped Elev Turret - .25 MOA - Fixed Parallax	\$999.99
522931 9920 080	4-16x44 Z-Plex Reticle (#20) - Ext. Elev Turret - Ballistic Stop - .25 MOA - Parallax Adj.	\$949.99
522935-9960-000	4-16x44 Plex Illum. Reticle (#60) - Capped Elev Turret - .25 MOA - Parallax Adj.	\$1,049.99
522935-9968-000	4-16x44 ZBi - Illum. Reticle (#68) - Capped Elev Turret - .25 MOA - Parallax Adj.	\$1,049.99
522935-9960-080	4-16x44 Plex Illum. Reticle (#60) - Ext. Elev Turret - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,099.99
522935-9968-080	4-16x44 ZBi - Illum. Reticle (#68) - Ext. Elev Turret - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,099.99
522931 9964 080	4-16x44 ZMOA-T30 Reticle (#64) - Ext. Elev Turret - Ballistic Stop - .25 MOA - Parallax Adj.	\$999.99
522935-9964-080	4-16x44 ZMOAi-T30 Illum. Reticle (#64) - Ext. Elev Turret - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,099.99
522945 9993 080	4-16x50 ZMOAi-1 Illum. Reticle (#93) - Ext. Elev Turret - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,099.99
522945-9964-080	4-16x50 ZMOAi-T30 Illum. Reticle (#64) - Ext. Elev Turret - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,099.99
522945-9968-080	4-16x50 ZBi - Illum. Reticle (#68) - Ext. Elev Turret - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,099.99
522955-9960-080	6-24x50 Plex Illum. Reticle (#60) - Ext. Elev Turret - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,199.99
522955 9993 080	6-24x50 ZMOAi-1 Illum. Reticle (#93) - Ext. Elev Turret - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,199.99
522955 9965 080	6-24x50 ZMOAi-T20 Illum. Reticle (#65) - Ext. Elev Turret - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,199.99
Part Number	30mm Main Tube - Matte Black - Second Focal Plane - NEW External Locking Windage Turret - T* Six Layer Transmission Coating - LotuTec Hydrophobic Coating	Retail
522935-9968-090	4-16x44 ZBi - Illum. Reticle (#68) - Ext. Elev. - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,149.99
522935-9964-090	4-16x44 ZMOAi-T30 Illum. Reticle (#64) - Ext. Elev. - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,149.99
522945-9964-090	4-16x50 ZMOAi-T30 Illum. Reticle (#64) - Ext. Elev. - Ballistic Stop - .25 MOA - PaQrallax Adj.	\$1,149.99
522955-9968-090	6-24x50 ZBi - Illum. Reticle (#68) - Ext. Elev. - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,249.99
522955-9989-090	6-24x50 ZMOAi-20 Illum. Reticle (#89) - Ext. Elev. - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,249.99
522955-9965-090	6-24x50 ZMOAi-T20 Illum. Reticle (#65) - Ext. Elev. - Ballistic Stop - .25 MOA - Parallax Adj.	\$1,249.99

Model	ZEISS Conquest V4				
	3 - 12 x 44	3 - 12 x 56	4 - 16 x 44	4 - 16 x 50	6 - 24 x 50
Magnification	3 x - 12 x	3 x - 12 x	4 x - 16 x	4 x - 16 x	6 x - 24 x
Focal Plane	Second	Second	Second	Second	Second
Effective Lens Diameter	27.1 mm - 44 mm	27.7 mm - 56 mm	33.2 mm - 44 mm	34.5 mm - 50 mm	44.9 mm - 50 mm
Exit Pupil Diameter	8.9 mm - 3.7 mm	9.2 mm - 4.7 mm	8.5 mm - 2.8 mm	8.5 mm - 3.1 mm	7.5 mm - 2.1 mm
Twilight Factor	9.0 - 23.0	9.1 - 25.9	11.5 - 26.5	11.7 - 28.3	16.4 - 34.6
Field of View at 100 yds	38 ft - 9.5 ft	38 ft - 9.6 ft	28.5 ft - 7.1 ft	28.5 ft - 7.1 ft	19 ft - 4.8 ft
Angular Field of View, Real	7.24° - 1.81°	7.3° - 1.8°	5.4° - 1.4°	5.43° - 1.36°	3.6° - 0.9°
Diopter Range			- 3 / + 2 dpt		
Eye Relief			3.5 in		
Parallax Setting	100 yds	100 yds	50 yds - ∞*	50 yds - ∞*	50 yds - ∞*
Elevation Adjustment Range	70 MOA	70 MOA	80 MOA	80 MOA	80 MOA
Windage Adjustment Range	70 MOA	70 MOA	60 MOA	60 MOA	60 MOA
Click Value			0.25 MOA		
Main Tube Diameter			30 mm		
Eyepiece Tube Diameter			44 mm		
Objective Tube Diameter	50 mm	62 mm	50 mm	56 mm	56 mm
Coating	LotuTec® / ZEISS T*				
Fogproof	Nitrogen Purged				
Waterproof	400 mbar (submerged 13 ft for 2 hours)				
Operating Temperature	-4 / +131°F				
Length	13.8 in	14.5 in	14 in	14.5 in	14.5 in
Weight / with illumination	17.6 oz	20.9 oz / 21.8 oz	21.3 oz	23 oz	22.5 oz / 22.5 oz / 23 oz
Weight with ELWT	N/A	N/A	22.93 oz	24.13 oz	24.13 oz
Reticles	#20 Z-Plex	#20 Z-Plex #60 illum.	#20 Z-Plex / #60 illum. ZMOA-T30 ZBi illum. ZMOAi-T30 illum.	ZMOAi-1 illum. ZBi illum. ZMOAi-T30 illum.	#60 illum. / ZMOAi-1 illum. ZMOAi-T20 illum. ZMOAi-20 illum. ZBi illum.

*Some models incorporate 10 yards to infinity parallax adjustment.

Carl Zeiss SBE, LLC
Customer Service: 1-800-441-3005
zeiss.com/consumer-products/us/home.html



Carl Zeiss SBE, LLC is not responsible for typographical errors, and we make every effort to ensure the accuracy of the information at time of printing. Product and specifications are subject to change without notice. Please visit zeiss.com/consumer-products/us/home.html for the most up-to-date product information. 04/2020

Seeing beyond