

ZEISS Victory SF & SFL



Seeing beyond



ZEISS

VICTORY SF AND SFL.

Superior field of view

Extremely wide field of view compared to many competitors for an even better overview in the field.




Increases the observable range by up to 20% compared to other binoculars




ErgoBalance Concept

Ideally balanced for long, steady viewing with less strain on the upper and lower arm muscles.



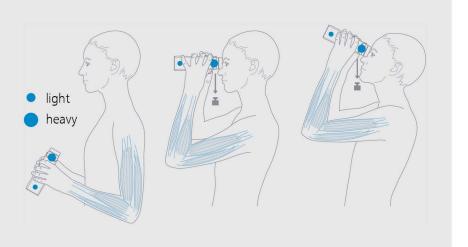


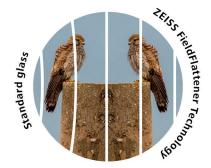

ZEISS FieldFlattener Technology Extreme edge sharpness, even at

wide fields of view.



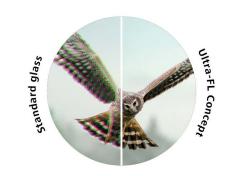

Ultra-FL Concept

Multiple SCHOTT fluoride lenses for exceptionally vivid details and a true-to-life appearance.





Standard glass

SCHOTT HT GLASS

HT Concept

High-transmission SCHOTT glass for optimal visibility in low light.





Ultra-HD Concept

Maximum detail visibility and color fidelity thanks to optimizations in coating and optical design.





LotuTec®Dirt-repellent and extremely easy-to-clean lenses.





T* Multi-layer coatingMulti-layer coating for sharp and high-contrast viewing.



















ZEISS Victory SF

ZEISS SFL















ZEISS



SMART FOCUS

WITH SUPERIOR FIELD OF VIEW.

VICTORY SF

Designed for birders and wildlife enthusiasts, the Victory SF binoculars sets the standard in ergonomics, image quality and field of view.

Rediscover the world of birdwatching with the ZEISS Victory® SF. You can experience every spectacle nature has to offer with brilliant optics and an unparalleled wide-angle field of view. Thanks to its light weight, unique ergonomic design and dynamic fast-focus feature, the Victory SF allows for hours of relaxing birding without fatigue. The Victory SF is the new benchmark for birding and wildlife observation in the 125-year development of ZEISS binoculars.

SmartFocus Concept







Competitor example

ZEISS Victory SF

Only 1,6/1,8 revolutions

The SmartFocus Concept ensures that the focusing wheel is perfectly positioned. This ensures that you can focus quickly and precisely, even when observing for hours on end.

VICTORY SF



Fast focusing

SmartFocus Concept for intuitive, precise, rapid focusing thanks to an ergonomic finger position.



Balanced ergonomics

The SF models' center of gravity has been shifted closer to the eyepiece thanks to the ErgoBalance Concept, allowing for long and fatigue-free observation.

True-to-Life image quality

Extremely wide field of view

The impressively wide fields of view of both SF models

give you a good overview in unclear terrain and help

The Ultra-FL Concept combines multiple SCHOTT fluoride lenses into a system that delivers extremely natural color rendering and vivid details.

ZEISS ZEISS

NATURE OBSERVATION.

VICTORY SF 32.



See more than others.

- An extremely wide field of view enlarges the observable area by up to 20% and thus up to 465 feet at 1,000 yards.
- 90 % light transmission.
- Vibrant and natural color rendering thanks to the UFL Concept.
- Compact design and ErgoBalance Concept for long hours of comfortable nature observation.
- Weighing just 21.2 ounces, much lighter than other binoculars.



SF 8/10×32

The SF 32 models feature vibrant, true-to-life image quality, an extended field of view, and an ergonomic design for longer, fatigue-free viewing.



IDEAL VISIBILITY INTO THE TWILIGHT HOURS. VICTORY SF 42.





SF 8/10×42

In addition to outstanding optical performance, the SF 42 model offers perfect ergonomics – the focusing wheel, which is perfectly positioned thanks to the SmartFocus Concept, enables fast and precise focusing.



The best for every situation.

- 92 % light transmission.
- Breathtaking viewing experience thanks to UFL Concept.
- Exceptionally wide field of view of up to 444 feet at 1,000 yards.
- ZEISS FieldFlattener technology: extreme edge sharpness, even at wide fields of view.
- Perfect ergonomics and ruggedness thanks to TripleLink bridge and lightweight design with state-of-the-art magnesium materials.
- Close focusing distance of 4.9 feet to explore the smallest details.



SMART FOCUSING AND LIGHTWEIGHT.

ZEISS SFL

The new ZEISS SFL binoculars make it possible to experience exciting moments with a new level of ease. Optimized for a light weight and compact size in every aspect and available in two different models, they perfectly complement the other binoculars in the ZEISS SF family.

The new UHD Concept for natural colors, the unique ergonomics, and the SmartFocus Concept ensure the binoculars deliver outstanding visual quality and an immersive viewing experience. The lightweight magnesium housing ensures that the binoculars are durable and long-lasting – for generations to come.



Extremely lightweight



The reduced lens diameter and more compact arrangement of even thinner lens elements make the SFL models **up to 30**% **lighter** than comparable binoculars.

VICTORY SFL



SmartFocus Concept

The perfectly positioned focusing wheel allows you to focus quickly and precisely – without having to spread your fingers apart.



Perfect ergonomics

The large exit pupil allows users to quickly and easily position their eye for a comfortable and immersive viewing experience. Improved eyecups for an even better ergonomic feel.

Superior optical performance

Ultralight, compact design

the Victory SF 42.

The lightweight magnesium body and reduced lens diameter combined with the closer spacing

make the SFL 19% lighter and 17% shorter than

The new UHD Concept delivers maximum detail visibility and color fidelity thanks to optimized coating and optical design.

ZEISS ZEISS

NATURE OBSERVATION.

ZEISS SFL 40.









SFL 8/10×40

The perfect ergonomics of the SFL 40 models, the ultra lightweight design, the UHD Concept, and the SmartFocus Concept make handling easy and precise while still providing the highest level of detail recognition, even when observing for hours on end.




Carefree observation.

- A viewing experience rich in detail with natural colors thanks to the UHD Concept.
- 90 % light transmission.
- The large exit pupil allows users to quickly and easily position their eye for a comfortable and immersive viewing experience.
- Ultra lightweight, compact design featuring the SmartFocus Concept.
- A clear view at all times thanks to our LotuTec[®] coating.

Control and Charles to be a second and a second a second and a second

COMPARISON OF VICTORY SF AND SFL.

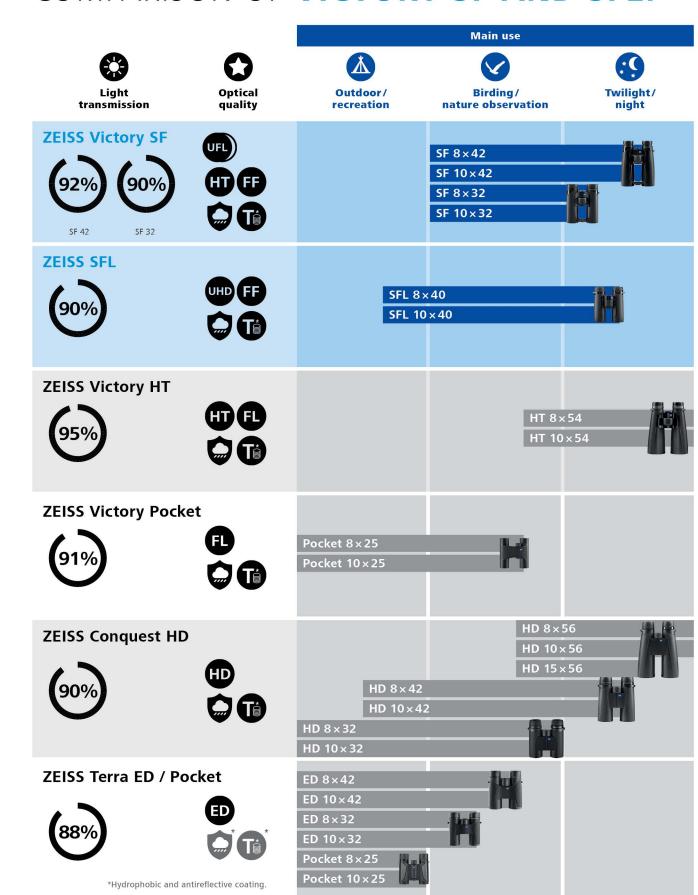

ZEISS

ZEISS

14

15

TECHNICAL DATA.

Victory binoculars	SF				SFL	SFL
Model	8×32	10×32	8×42	10×42	8×40	10×40
Magnification	8	10	8	10	8	10
Effective Lens diameter	32 mm		42 mm		40 mm	
Exit pupil diameter	4 mm	3.2 mm	5.3 mm	4.2 mm	5 mm	4 mm
Twilight factor	16	17.9	18.3	20.5	17.9	20
Field of view (ft/1,000yds)	155	130	148	120	420	345
Subjective viewing angle	67°	69°	64°		60°	
Close focusing distance	6.4 ft 4.9 ft		4.9 ft			
Diopter adjustment range	+-4 dpt			+-4 dpt		
Exit pupil distance	19 mm		18 mm		18 mm	
Interpupillary distance (IPD)	54-76 mm		55-76 mm		52-74 mm	
Prism system	Schmidt-Pechan		Schmidt-Pechan		Schmidt-Pechan	
Coating	LotuTec®				T*	
Nitrogen filling	Yes				Yes	
Water resistance	400 mbar				400 mbar	
Operating temperature	-22/+145 °F				-4/+131 °F	
Length	5.9 in		6.8 in		5.7 in	
Width at an interpupillary distance of 65 mm	4.4 in		4.9 in		4.5 in	
Weight	21.2 oz 20.8 oz		27.8 oz		22.6 oz	

Subject to changes in design and scope of delivery as a result of ongoing technical development.

ACCESSORIES



Air Cell Comfort Straps

The carrying strap makes carrying binoculars with a lens diameter of 30 mm or more much more comfortable. The enclosed air cushions increase carrying comfort. Quick-release fasteners allow you to quickly attach and detach the carrying strap. The length of the strap is fully adjustable.



Comfort Cross Straps

The cross straps made of high-quality materials reduce neck strain and distribute the weight of the binoculars across the upper body. The binoculars remain steady and do not swing in different directions when you are moving. The binoculars can be easily locked in place and and are very comfortable to carry at the same time.

PROTECTING WHAT WE LOVE.

ZEISS NATURE CONSERVATION PROJECTS.

ZEISS optics deliver fascinating observations and unforgettable moments to nature lovers and birdwatchers around the world. We strive to protect what we can see, which is why ZEISS actively supports numerous conservation projects.





BirdLife International -

In Morocco, ZEISS and BirdLife International are working together to protect the northern bald ibis, one of the world's rarest birds, from extinction.





The Cornell Lab of Ornithology Young Birders Weekend –

ZEISS and the Cornell Lab of Ornithology support young persons interested in a career in ornithology.





Champions of the Flyway –

The aim of this event is to promote birdwatching and simultaneously collect donations for the protection of birds. ZEISS sponsors several teams taking part in this 24-hour birdwatching marathon and helps with the organization of the opening gala.

Information about other projects can be found at www.zeiss.com/nature/cooperations

ZEISS

ZEISS Transferable Limited Lifetime Warranty and Transferable Five-Year No-Fault Policy

At ZEISS North America we back your Sports Optics purchase with a limited lifetime warranty as well as a 5-year no-fault policy — both fully transferable.

The warranty protects against defects in workmanship and materials in the Optical System for the life of the product, and in electronic components for five years from the date of purchase. Components (such as turrets) and accessories (such as lens caps) are warranted for one year from the date of purchase. If a ZEISS product has a defect covered by this warranty, we will either repair it, or replace it, with a new or reconditioned ZEISS product ofcomparable specifications. **Please note** that certain specialty products (such as stabilized binoculars and DTI thermal scopes) have shorter warranty periods.

ZEISS understands that accidents happen, so in addition to the limited lifetime warranty, we offer the added protection of our transferable Five-Year No-Fault Policy on **select Victory and Conquest products**. If you accidently damage your product during normal and intended use within the first five years of the life of the product, we will either repair it, or replace it, at no cost to you.

To view the complete details of the Transferable ZEISS Limited Lifetime Warranty and Transferable Five-Year No-Fault Policy, please visit: zeiss.com/consumer-products/us/service.html

ZEISS DTI Thermal Imaging Cameras Warranty

ZEISS grants a minimum warranty period of two years from the date of purchase for the ZEISS DTI 3/25 and 3/35 Thermal Imaging Camera. The DTI 3/25 and 3/35 are also eligible to have the warranty extended by one year, for a total of three years, if the buyer registers the product via ZEISS Online Registration within four weeks of the purchase date. Register online at zeiss.com/consumer-products/us/service/product-registration.html

Become a Part of the **ZEISS Birding Community**Follow us online:

facebook.com/ZEISSBirding

youtube.com/zeissnature

#passionforbirding

zeissnature

Customer Service

1-800-441-3005 info.sportsoptics.us@zeiss.com

Carl Zeiss SBE, LLC

Consumer Products

zeiss.com/consumer-products/us/nature-observation.html

OVERVIEW OF BENEFITS



HT Concept

High-transmission SCHOTT glass for optimal visibility in low light.



Extra Low-Dispersion Glass

For enhanced color fidelity.



Ultra-FL Concept

Multiple SCHOTT fluoride lenses for exceptionally vivid details and a true-to-life appearance.



Fluoride Glass

A natural appearance thanks to fluoride glass from SCHOTT.



Ultra-HD Concept

Maximum detail visibility and color fidelity thanks to optimizations in coating and optical design.



High-Definition Lenses

For outstanding resolution and fine sharpness.



ZEISS FieldFlattener Technology

Extreme edge sharpness, even at wide fields of view.



LotuTec[®]

Dirt-repellent and extremely easy-to-clean lenses.



T*

Multi-layer coating for sharp and high-contrast viewing.

