

Actinic Review of EUV Masks: Status and Recent Results of the AIMS™ EUV System

Sascha Perlitz^a, Jan Hendrik Peters^a, Markus Weiss^b, Dirk Hellweg^b, Renzo Capelli^b, Krister Magnusson^b, Matt Malloy^c, Stefan Wurm^c

^aCarl Zeiss SMT GmbH, Carl-Zeiss-Promenade 10, 07745 Jena, Germany

^bCarl Zeiss SMT GmbH, Rudolf-Eber-Str. 2, 73447 Oberkochen, Germany

^cSUNY Poly SEMATECH, 257 Fuller Road, 12203 Albany, NY, US

ABSTRACT

Key enabler of the successful introduction of EUV lithography into volume production is the EUV mask infrastructure. For the production of defect free masks, actinic review of potential defect sites to decide on the need for repair or compensation is required. Also, the repair or compensation with the ZEISS MERiT electron beam repair tool needs actinic verification in a closed loop mask repair solution. For the realization of actinic mask review, ZEISS and the SEMATECH EUVL Mask Infrastructure consortium started a development program for an EUV aerial image metrology system, the AIMS™ EUV, with realization of a prototype tool. The development and prototype realization of the AIMS™ EUV has entered the tool calibration and qualification phase utilizing the achieved capabilities of EUV aerial image acquisition and EUV mask handling. In this paper, we discuss the current status of the prototype qualification and show recent measurement results.

Keywords: AIMS™, AIMS™ EUV, EUV Lithography, EUV masks, mask defects, actinic inspection.

1. INTRODUCTION

As EUV Lithography is intensively advancing towards its introduction into the semiconductor manufacturing process, efforts are being made throughout industry to overcome the severe scientific and technological challenges that this paradigm change brings with it. Challenges have recently been advocated to be compelling for the realization of the full EUV infrastructure, among which EUV photomask defectivity is a top priority venture.

Regarding photomask defectivity qualification, the need for an actinic review and inspection tool is made necessary by the very nature of EUV light and its reflection process onto EUV optics. While for 193 nm lithography the class of defects can be fairly circumscribed to absorber defects on top of the refracting glass substrate, EUV lithography extends the defect diversity, since the structure of the reflective multilayer mirror and the substrate can also strongly affect defect printability^{1, 2}. As a result, only EUV actinic imaging can univocally determine defect printability: AIMS™ EUV responds to this compelling necessity, completely fulfilling industry requirements in terms of performance specifications and scanner matching³. The development of an actinic AIMS™ EUV system has been enabled by a collaboration between SEMATECH, ZEISS and the EMI consortium. Since more than twenty years the AIMS™ systems have served as crucial tools for mask shops for defect disposition and repair verification, having the great advantage of emulating the scanner mask illumination conditions.

In this work we report on the status of the AIMS™ EUV system development, focusing our discussion on the different development phases and on the fundamental tool capabilities that have been achieved and are already available for use on the tool. In section 2 the status of the prototype tool and of the first three customer tools is presented, followed by an update on the tool capability status (e.g. mask handling, image acquisition). Next, the current productivity (i.e. run rate) and performance (e.g. CD reproducibility and tool internal metrology reproducibility) status will be discussed, with the focus on the actual results which have been achieved on the prototype tool during the first measurement campaigns after the tool launch.

2. PROJECT STATUS

The AIMS™ EUV project was started in the first half of 2011. In 2013 the completion of the hardware integration of the EUV Metrology Core was achieved, which led to the first important milestone of First Light in December 2013, in which the first EUV aerial images were measured. This milestone was a great achievement in terms of risk reduction and technology demonstration, and gave the go for the further integration of the entire system, accomplished in the last quarter of 2014. Since then, effort and focus has been devoted towards bringing the tool into operation. Figure 1 shows the time sequence of recent development steps carried out on the prototype tool: after final integration was achieved and first measurements with hardware completely assembled delivered excellent results, the component and module launch via low level software was executed, followed by the launch of basic tool capabilities (e.g. mask and aperture handling, image acquisition sequence). The prototype tool was successfully launched in the first quarter of 2015, with tool adjustments and calibrations being the main focus of the current phase. Parallel to the tuning of all components, in April 2015 the EMI program participant access to the prototype tool was started, in which participants of the EMI consortium is granted a measurement block per month. This program has been running successfully since then, with the AIMS™ EUV system being capable already at this early stage of delivering very good image quality.

The next project milestone is the achievement of the application automation. Once this is achieved the tool can be operated (mask and aperture handling, image acquisition and analysis, etc.) via the high level Application software, which provides a user customizable working environment typical of the ZEISS AIMS product line.

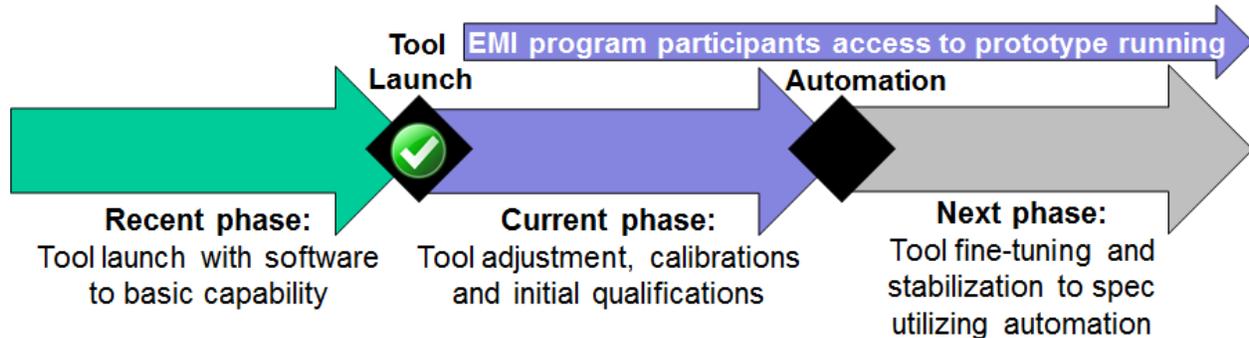


Figure 1. AIMS™ EUV prototype tool development path to final specification

As already presented in other works⁴, four AIMS™ EUV tools are currently being developed and assembled at ZEISS SMT in Oberkochen (Germany). Figure 2 shows recent pictures of the prototype tool and the first three customer tools in sequence, in which it is possible to visualize the development path described above. The hardware of all tools, prototype and three customer tools, has been fully integrated (thermal acoustic enclosures are not completely assembled on all tools yet to allow easier access to service activities which might be required). The last in the line tool (Customer 3) is currently in the component and module launch phase; the Customer 2 tool recently delivered the first EUV measured aerial images (First Light) and is now in the base tool capability launch, whereas the Customer 1 tool development is running almost parallel to the prototype, with image acquisition, adjustments and calibrations being the currently ongoing activities.



Figure 2. From left to right: recent pictures of the prototype and three customer tools

In the Table underneath (Figure 3) the performance specifications for the AIMS™ EUV tool is shown. The technology target node is 7 nm logic, corresponding to structures with 16 nm half-pitch, with CD reproducibility ≤ 1.5 nm (3σ value at mask level). AIMS™ EUV was designed to perform the full emulation of the scanner imaging of the mask onto the wafer (CCD camera on AIMS™): the scanner generations targeted are the NXE:3100 and NXE:3x00, with NA settings from 0.25 up to 0.33. The run rate (number of defect sites on the mask that can be imaged per unit of time) is illumination dependent (pupil fill): for focus stacks consisting of best focus plane ± 3 defocus planes a run rate of ≥ 27.5 sites per hour for a dipole sigma aperture and ≥ 51 sites per hour for an annular sigma aperture will be achievable. A larger run rate can be achieved in a higher throughput mode with a reduced CD reproducibility performance (specified to 1.8nm 3σ value at mask level).

Performance Specifications		
Target node	7nm logic (16nm hp)	
Scanner emulation	Up to 0.33 NA	
CD Reproducibility	≤ 1.5 nm (3σ , mask level)	
Run Rate standard 7 focus planes per site	≥ 27.5 /hr ≥ 51 /hr	> 38.5% pupil fill > 77% pupil fill
Run Rate fast mode* 7 focus planes per site *CD-repro = 1.8 nm (3σ)	≥ 55 /hr	>38.5% pupil fill

Figure 3. Overview of the top level specifications for AIMS™ EUV.

3. CAPABILITY STATUS

Key operational capabilities for the AIMS™ EUV mask defect inspection and review tool are the once that enable the full emulation of the scanner imaging process, e.g. automated mask handling and aerial image through focus stack acquisition for the full review of the structure / defect printing behaviour. Figure 4 shows an example of through focus stack of aerial images acquired with the AIMS™ EUV prototype tool during the most recent calibration and tuning phase. Imaging target are programmed defects with variable size within a semi-isolated lines and spaces periodic pattern: the central panel shows the best focus (BF) plane, whereas the left and right panels represent the -2 μ m and +2 μ m defocus planes respectively. Clearly evident in the images are the programmed defects in size of 45 nm (central image) and 45 ± 5 nm at the right and left side respectively. The excellent capabilities of EUV through focus imaging of programmed defects on the AIMS™ EUV tool has also been demonstrated and reported in previous works⁴.

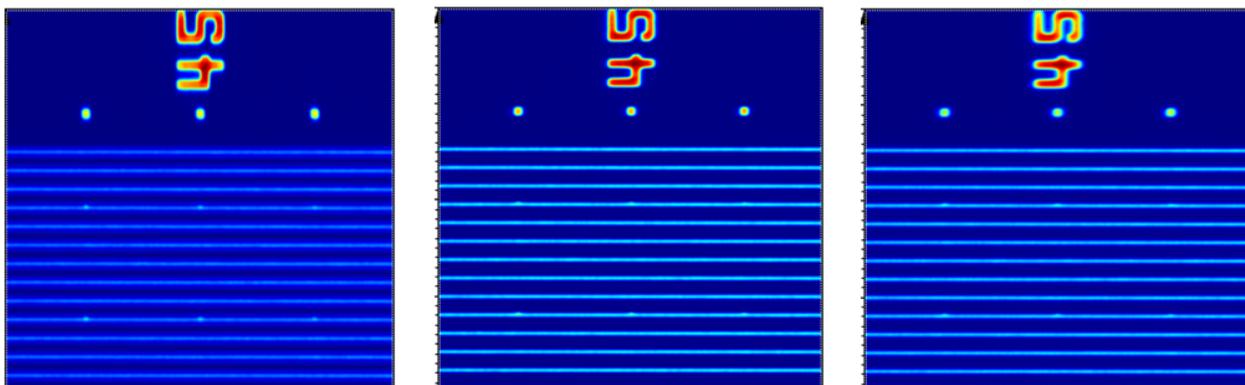


Figure 4. Best focus plane (center) and defocus planes (sides) of an aerial image through focus stack as measured on the AIMS™ EUV prototype calibration mask.

The fundamental capabilities achieved in the last development phase are the automatic initial focus search and clear normalization: the focus search can be executed at each site on the mask or rather only at the beginning of a review job where lots of sites are to be imaged, and it is fundamental in order to obtain a symmetric contrast curve, which in turn allows to derive full information on the imaging process in the form of Bossung curves, NILS diagram and process window. Secondly, the clear normalization capability is of key importance for the compensation of any variability or non-uniformity of the intensity distribution of the EUV plasma source.

Together with the afore mentioned imaging capabilities, the AIMS™ EUV tool emulates the chief ray angle illumination which is characteristics of the EUV scanner imaging: in the NXE:3100 and NXE:3x00 tools, the mask is illuminated through an arc shaped slit which introduces an azimuthal component to the propagation of the EUV photons to and from the mask. Among the most significant consequences of this imaging design is the formation of pattern and position dependent shadows which have to be taken into account during mask design, wafer printing and defect repair⁵. AIMS™ EUV is fully capable of emulating the shape of the scanner illumination at a certain (X,Y) position on the mask by the synchronous motion of the NA and sigma aperture (see top panel of Figure 5), the position of which is univocally determined by the X coordinate on the mask⁶.

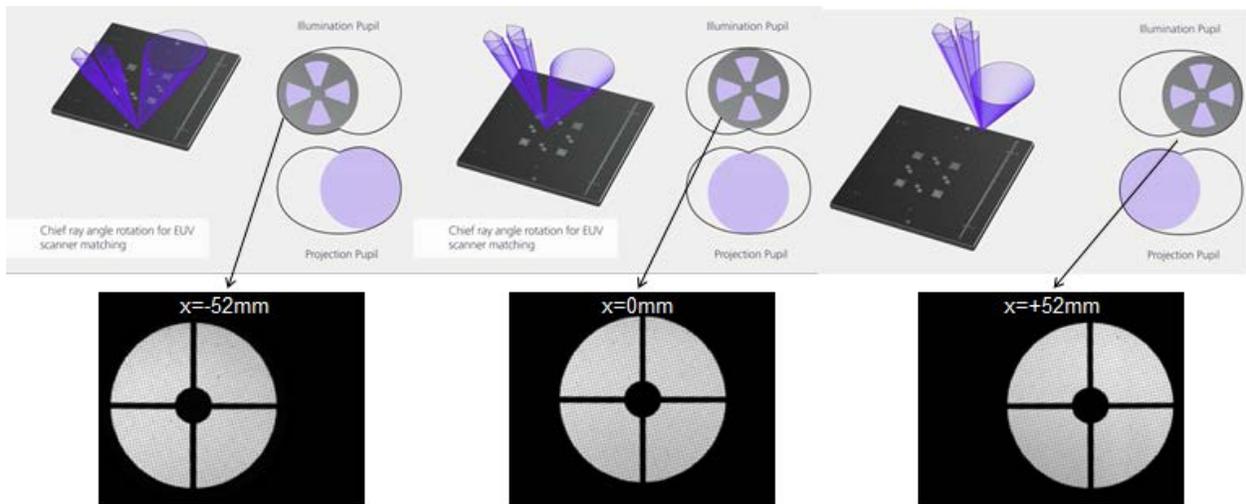


Figure 5. Sketch of chief ray angle emulation NA and sigma settings across the X coordinate of the mask with actual pupil images acquired at the tool .

In Figure 5, a schematic drawing of the chief ray angle emulation is provided along with actual pupil images measured on the AIMS™ EUV prototype tool for the central position ($x=0$ mm) and the two outmost positions ($x=\pm 52$ mm): to notice is the shifting position of the bright area of the pupil image with respect to its dark background. As requested by the industry, AIMS™ EUV provides several design schemes for the EUV illumination of the mask (see Figure 6): differently to the older AIMS™ tools, in which different illumination schemes can be selected within one single sigma stick to be manually inserted within the beam path, on the AIMS™ EUV one illumination scheme is provided with each aperture support. Figure 6 shows the pupil images acquired during the EMI consortium members access program with the imaging settings currently available on the prototype tool.

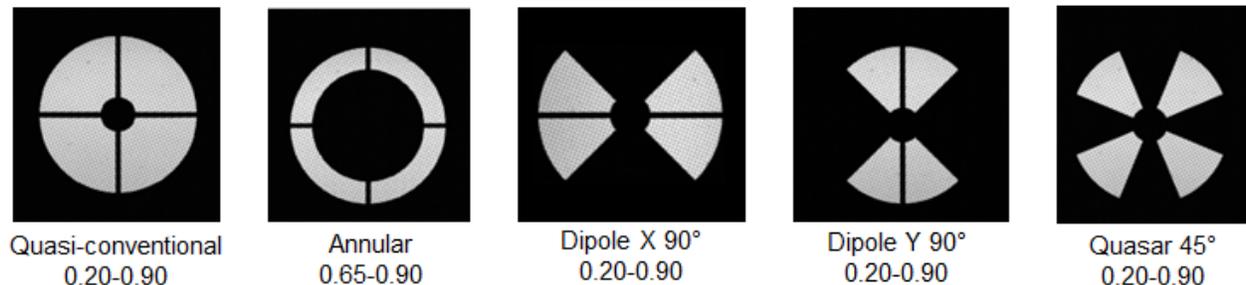


Figure 6. Pupil images acquired on the AIMS™ EUV prototype with the currently available sigma settings.

4. PRODUCTIVITY QUALIFICATION STATUS

Immediately after the successful tool launch in the first quarter of 2015, in April 2015 the EMI program participant access to the AIMS™ EUV started, in which participating companies deliver EUV masks to ZEISS to be loaded and measured onto the tool. To date, 5 measurement campaigns have been successfully carried out, in which more than a thousand focus stacks were already delivered by the ZEISS AIMS EUV team to the EMI participant companies. The program has the double advantage and importance to provide early access (tool has not yet fully reached the final specifications) to an EUV actinic review tool to the EMI participants, as well as providing application learning experience for the ZEISS team along the development path towards the achievement of final specifications of AIMS™ EUV platform.

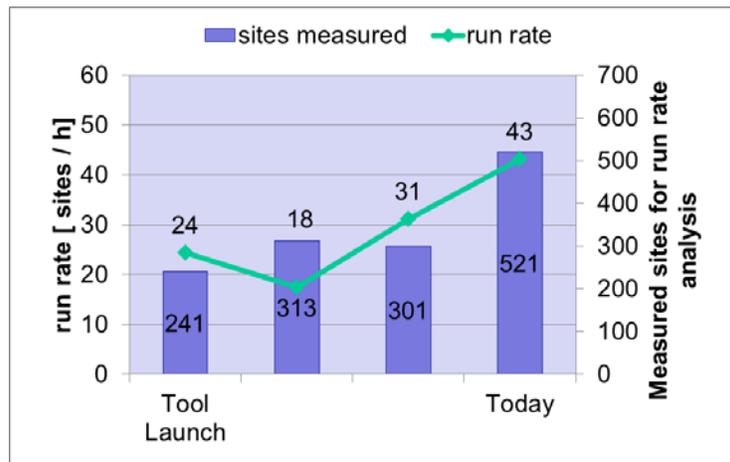


Figure 7. Productivity qualification status: run rate and total number of focus stacks acquired during EMI participant companies access measurements.

Figure 7 shows the actual results in terms of total number of stacks acquired (histogram) and productivity run rate (green line) achieved by the AIMS™ EUV prototype tool during the first five customer measurement blocks (block 4 and 5 combined): these results are based on a mix of low and high pupil fill measurements, therefore a direct comparison with the specification Table provided in Figure 3 cannot be made.

The statistics reported in Figure 7 shows a continuous improvement on stack acquisition run-rate, which was achieved through software development process and tool sequences optimization. The current status does not fulfil the final productivity requirement yet, but it already provides sufficient throughput performance for optimizations of CD reproducibility during the ongoing calibration and tuning phase.

5. PERFORMANCE QUALIFICATION STATUS

Some calibration measurements as well as information derived from the customer access data allow to draw preliminary conclusions on the status of the performance qualification with respect to key deliverables, e.g. CD reproducibility and EUV optics performance.

Figure 8 shows the CD reproducibility results from a champion dataset measured during one of the measurement blocks opened to the EMI members. An horizontal lines and spaces array as illustrated in the left panel of Figure 8 was measured for ten times on a customer test mask, from which 25 Regions of Interest (ROIs) were subsequently analyzed for CD measurements. The right panel of the same Figure shows the CD Reproducibility values (in terms of 3 times the standard deviation of the 10 measurements) for the ROIs 1 to 25, in which the highest value was found to be lower than the specification boundary of 1.5 nm. This champion dataset, as well as other champion datasets of 20 repeats, clearly indicate the potential to reach in-spec performance. Within the running calibration and tuning phase the continuous stabilization of current champion performance will be of focus.

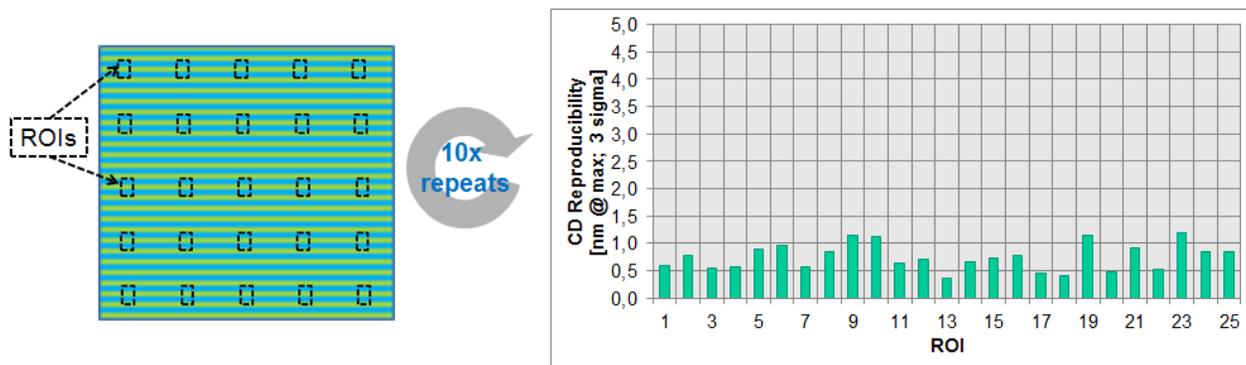


Figure 8. CD Reproducibility champion results from EMI access measurements.

Besides run rate and CD reproducibility, the quality of the EUV optics has also been measured. The first tool internal aberrations metrology has been tested, with the metrology reproducibility measured to be about 10 times smaller than the tool aberration specification level (RMS for the wavefront error measured through the extraction of the Zernikes values Z5-Z37, see Figure 9).

Therefore, it can be safely stated that the metrology capability for optics tuning has been successfully achieved. Also the first results on the tool aberration level (not shown in Figure 9) indicate safe initial in-spec tool aberration performance.

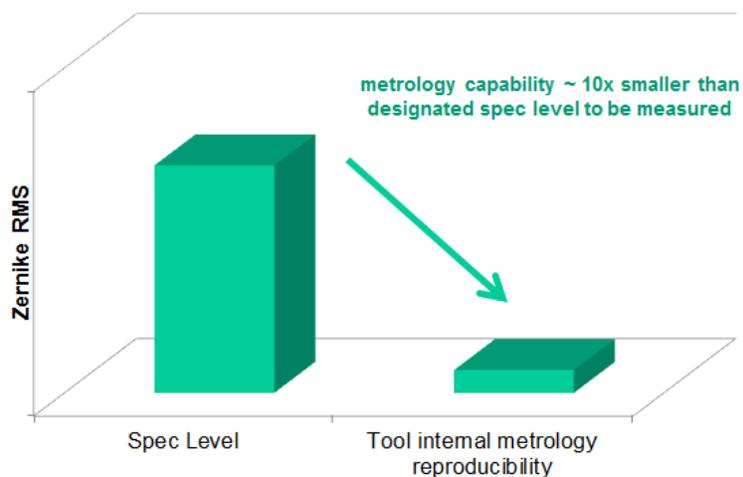


Figure 9. Metrology capability results of the AIMS™ EUV prototype system.

6. STATUS AND SUMMARY

In this work, the progress of the AIMS™ EUV project has been reported, and the status of the prototype tool as well as the first three customer tools shown. Tool adjustments and calibrations, as well as first tool qualifications are at this date being carried out on the AIMS™ EUV prototype tool, for which the fundamental mask imaging and handling capabilities have been successfully achieved. This current phase will lead towards the automation milestone (see Figure 1), from which further fine tuning and stabilization will bring the tool to meet final specification.

From April 2015 the EMI program participants access phase is successfully running on the AIMS™ EUV prototype parallel to other development activities. From internal qualification and customer measurements some first key tests could be performed: the first productivity results on the run-rate indicate sufficient current performance to continue in optimization for CD reproducibility. In addition, the first CD reproducibility champion data show potential for reaching specification performance. Besides, the initial optics qualification has been carried out and the tool internal aberration metrology capability verified.

7. ACKNOWLEDGEMENTS

The authors would like to thank SEMATECH and the EMI consortium for their support and contributions to the AIMS™ EUV project.

REFERENCES

-
- ¹ A. Erdmann, P. Evanschitzky, T. Bret, R. Jonckheere, Proc. SPIE 8322, Extreme Ultraviolet (EUV) Lithography III, 83220E (March 29, 2012); doi:10.1117/12.916411
 - ² I. Mochi, K.A. Goldberg, R. Xie, P.Y. Yan, K. Yamazoe, Proc. SPIE 7969, Extreme Ultraviolet (EUV) Lithography II, 79691X (April 07, 2011); doi:10.1117/12.881652
 - ³ D. Hellweg, J. Ruoff, A. Herkommer, J. Stühler, T. Ihl, H. Feldmann, M. Ringel, U. Stroßner, S. Perlitz, W. Harnisch, Proc. of SPIE - The International Society for Optical Engineering (Impact Factor: 0.2). 03/2011; DOI: 10.1117/12.879422
 - ⁴ A. Garetto, R. Capelli, K. Magnusson, J.H. Peters, S. Perlitz, U. Matejka, D. Hellweg, M. Weiss, M. Goldstein, Proc. SPIE 9235, Photomask Technology 2014, 92350N (October 29, 2014); doi:10.1117/12.2068308
 - ⁵ R. Capelli, A. Garetto, K. Magnusson, T. Scherübl, SPIE 9231, 30th European Mask and Lithography Conference, 923109 (17 October 2014); doi: 10.1117/12.2067578
 - ⁶ M. Weiss, D. Hellweg, J.H. Peters, S. Perlitz, A. Garetto, M. Goldstein, SPIE 9048, Extreme Ultraviolet (EUV) Lithography V, 90480X (24 April 2014); doi: 10.1117/12.2046302